FLOWSTATE
DESIGN CO.

LidBay

One clip, one lid. Five minutes to put up.

YOU'LL NEED

- A screwdriver, or a drill to make it quicker
- A small drill bit for pilot holes (helps, not a must)
- 2 flat-head wood screws per clip, #6 or #8, shorter than your door is thick (not included)
- A pencil

Lost this card?
Scan for the full guide online.

flowstatedesignco.com
/lidbay/instructions

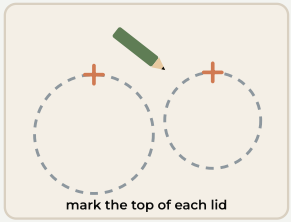

1 Plan the spot

Hold each lid up to the door and mark the top of the rim. Check the door still closes.

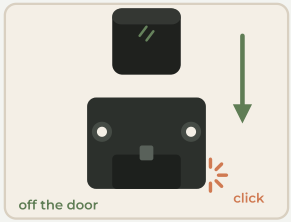

2 Clip onto the plate

Before it goes on the door, slide the clip down onto its plate until it clicks.

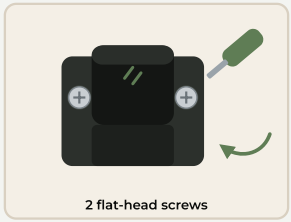

3 Screw it to the door

Two flat-head screws beside the clip, shorter than the door is thick. A drill helps. The door locks the clip in.

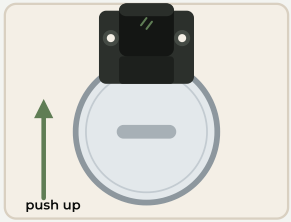

4 Hang a lid

Push the rim straight up into the jaw. The springs close behind it.

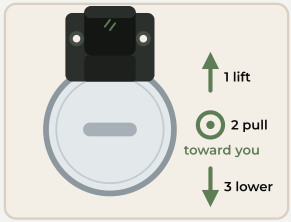

5 Take it out

Lift a little, pull toward you, lower. One hand.

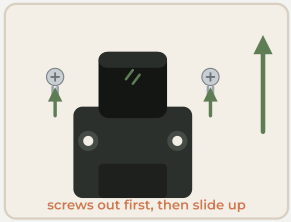

6 Moving a clip

Take out both screws. Off the door, the clip slides up and off its plate.